

VW T6.1 (WITH AIRCON)

GRILLE KIT FOR TRIPLE-R 750

FITTING INSTRUCTIONS



TECHNICAL SUPPORT

Email: sales@lazerlamps.com
Phone: +44 (0)1992 677374

WHAT'S REQUIRED

- 1x Grille Integration kit (for Triple-R 750)
- 1x CAN Interface

DIFFICULTY LEVEL**TOOLS REQUIRED**

**DRILL BIT
3.5MM**



**SPANNER
10MM**



**WIRE STRIPPERS
AND RATCHET CRIMPERS**



WIRE CUTTERS



HACKSAW




**ALLEN KEY
SIZE: 4**



**PHILLIPS / T-25 TORX
SCREWDRIVER**



**PLASTIC
TRIM TOOLS**

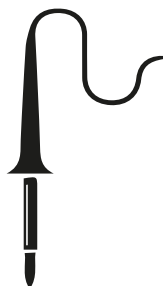

**SOLDERING
IRON**


IMPORTANT INFO

Remove the battery before you start to remove the bumper.
When you start any VW MY06+ after having the battery disconnected the dashboard will display multiple errors. To reset the errors please follow steps below:

- 1: TURN ENGINE ON
- 2: TURN WHEELS FULL LOCK TO LEFT
- 3: TURN WHEELS FULL LOCK TO RIGHT
- 4: SWITCH IGNITION OFF
5. RESTART VEHICLE

**STEP 1**

Remove x4 plastic push rivets.

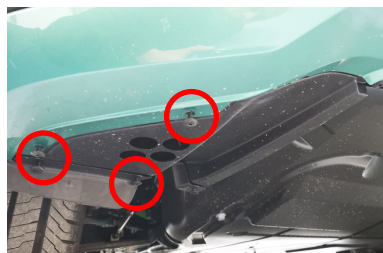**STEP 2**


Remove x12 screws on the underside of the bumper.

**STEP 3**

Remove the screws on the inside of both wheel arches.

**STEP 4**

Remove the vertical push fit clip inside the arch liner that is holding the bumper to the wing bracket.

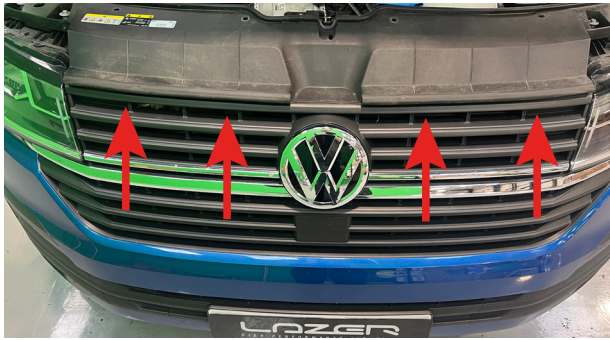**STEP 5**


Unclip the bumper grille from the top cover.

**STEP 6**

The bumper can now be slowly removed from the vehicle.


**STEP 7**

To install Triple-R 750's into a VW T6.1 the aircon pipe cover will need to be removed for the lights to fit.

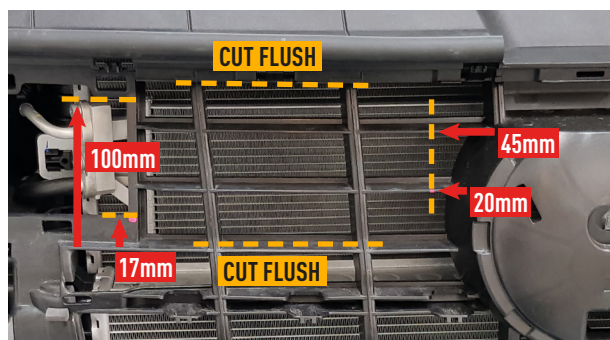**STEP 8**


Additionally to removing the aircon pipe cover, some additional cutting of the 2nd grille behind the main grille will be required (drivers side only - you should be able to cut through the main grille and 2nd grille on the other side of the vehicle).

Mark with a paint pen or similar where to cut as per the measurements shown.

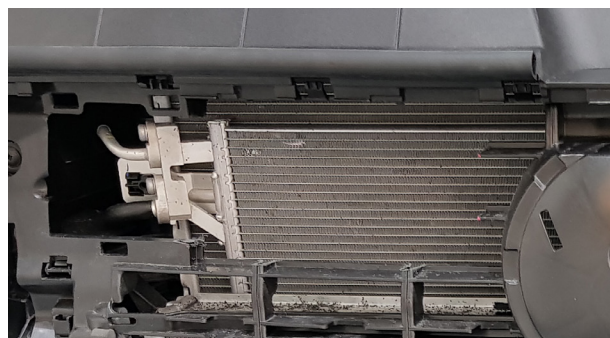**STEP 9**

Remove the parts of the grille that you have marked to be removed with a hacksaw.


The bumper can then be reinstalled.

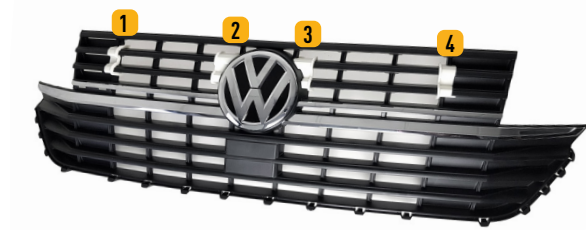

STEP 10

Next images show grille off the vehicle, but installation should continue with the grille left on the vehicle.

Place cutting guides on the grille as shown.

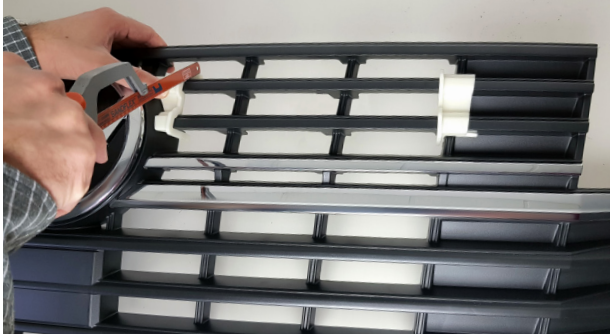

STEP 11

Cut the vertical veins as per the cutting guides using a hacksaw.




STEP 12



Cut the horizontal veins leaving 10mm in tact.

Then remove the parts of the grille you have cut.

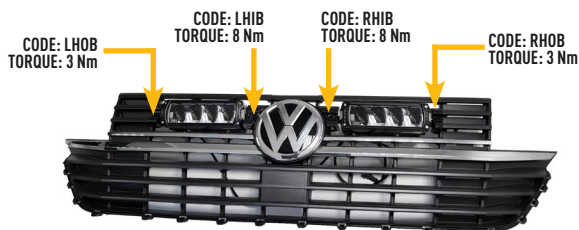

STEP 13



Fix the grille mount brackets to both lights as per the diagram shown.

Inboard: 8 Nm
Outboard: 3 Nm



STEP 14

Slide the lights into the grille (outboard first), ensuring the clips on the brackets are secured at the back of the grille.



STEP 15

Drill a 3.5mm hole for each inboard bracket for the self tapping screws as shown.




STEP 16


Secure the lights with a self tapping screw where you have pre-drilled the holes.

WIRING INFORMATION

TRIPLE-R 750

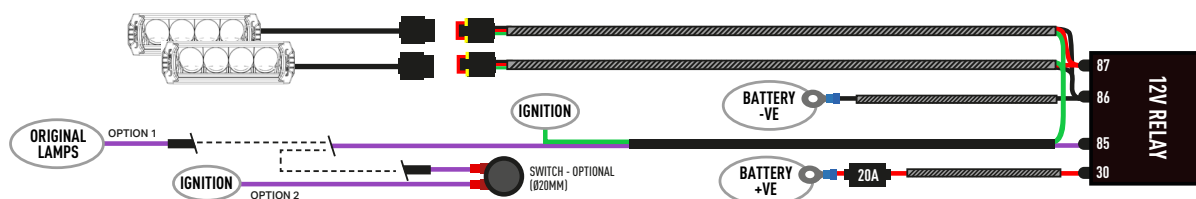

TRIPLE-R 750 ELITE

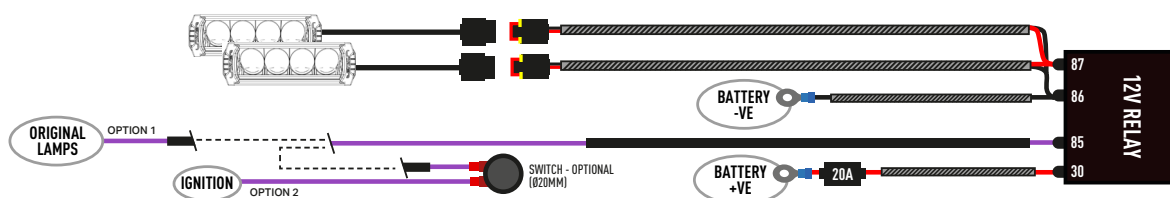

CAN INFORMATION

CAN'T FIND A HIGH BEAM 12V SIGNAL?

For vehicles that do not produce a constant 12v signal from the back of the headlight, these will require a CANbus interface. Please see our YouTube channel for more information regarding install of a CANbus interface.

The CAN wires are located in the plug at the rear of the climate control panel.

RED > BATTERY LIVE FUSED 5A
BLACK > GROUND/EARTH
WHITE > CAN HI (YELLOW WIRE)
BLUE > CAN LO (BLACK WIRE)
PURPLE > HIGH BEAM OUTPUT (12V)

